



MAKING A KITE "PARASLED"

All dimensions in millimeters

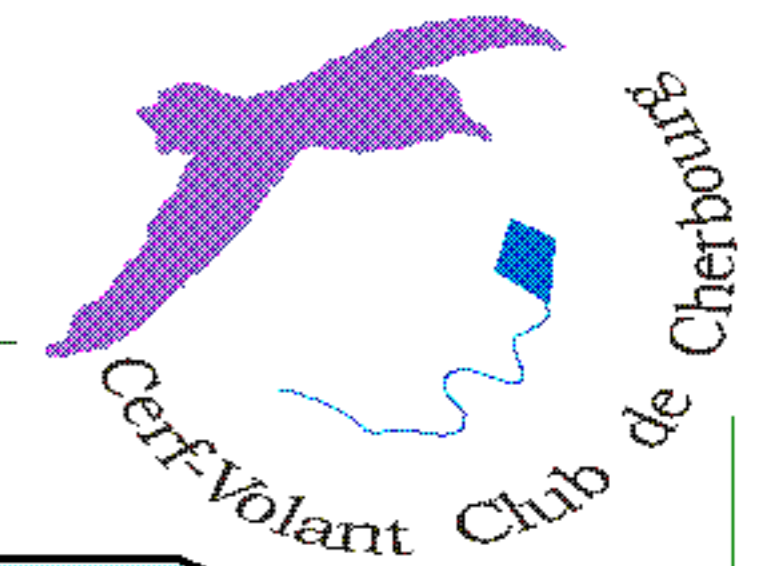


1 Cut the sail

In thin polyethylene film
draw the dotted lines

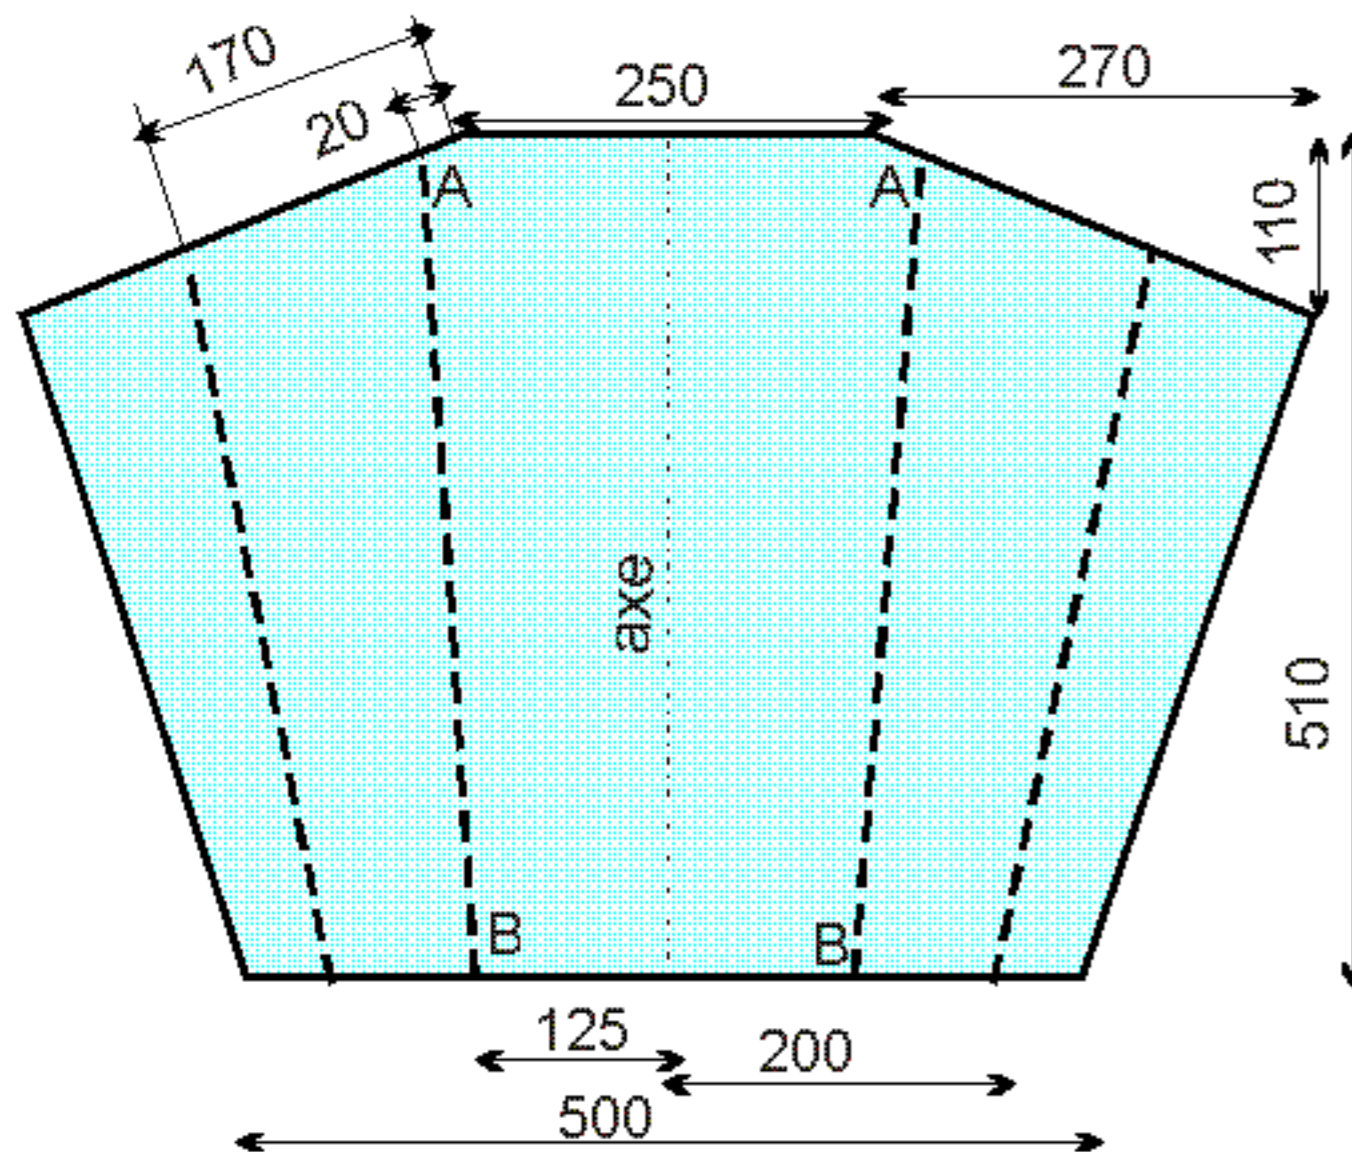


4 Set the sleeves

The sleeves are placed on top side,
opposite to the pattern side
With magic tape,
stick the edge AB along the dots
Tape both sides of each sleeve along AB

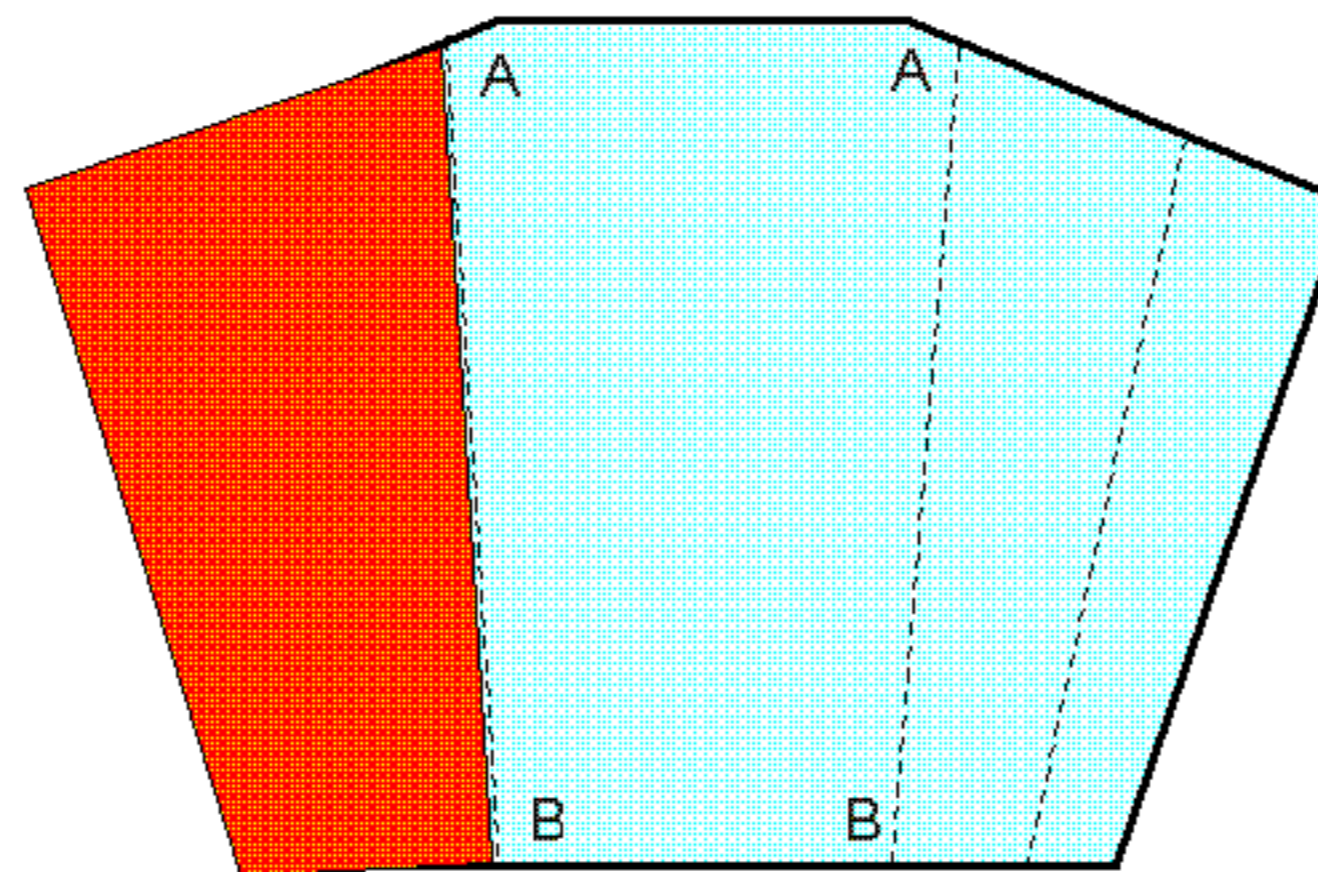

5 Straps for bridle

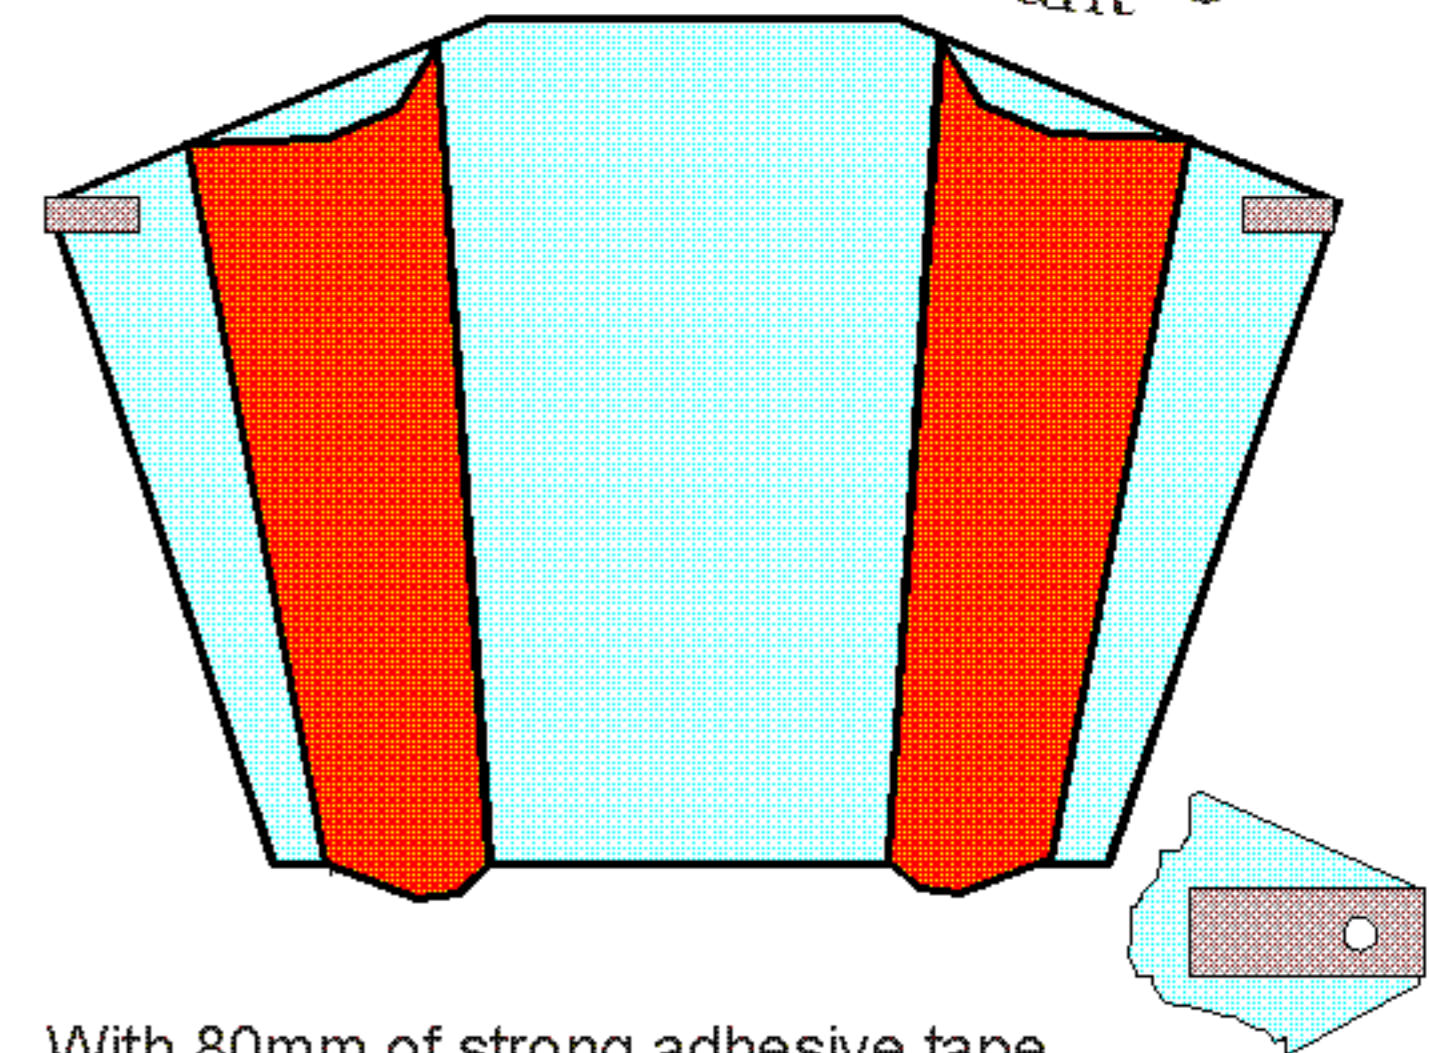


With 80mm of strong adhesive tape,
stick 60mm top side, and 20mm underneath
Pierce a hole with a nail

2 Decorate

With permanent ink pens.
The pattern will mostly fill
the center part between the sleeves


3 Cut the sleeves

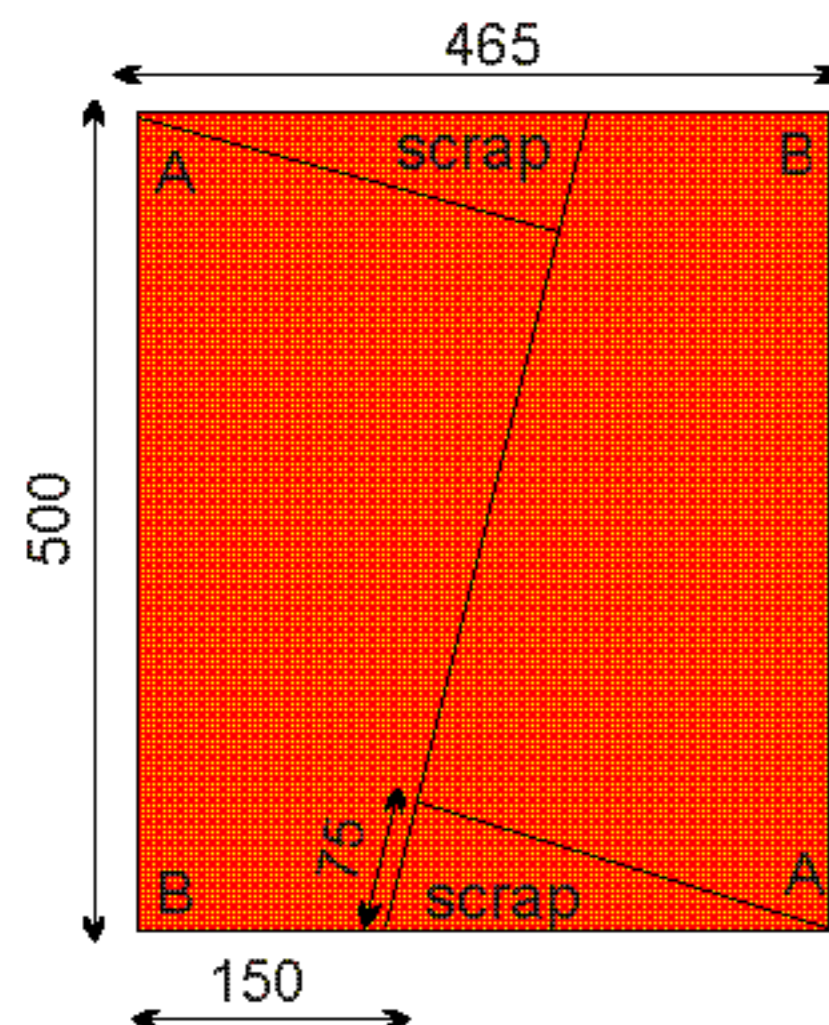

In thick plastic
film

After cutting,
verify the
symmetry of the
two sleeves

Set the second edge of each sleeve
on the second dotted line.

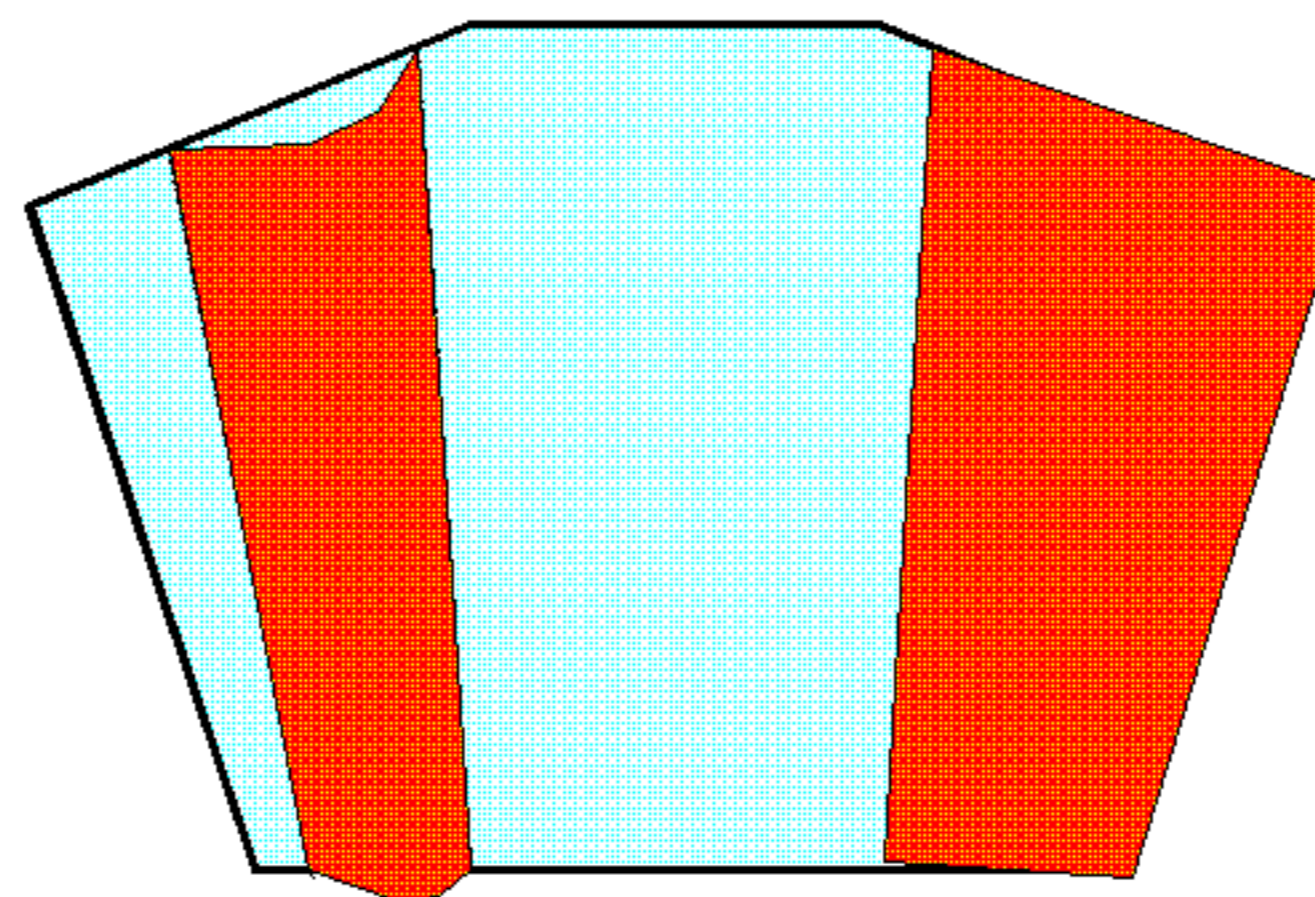

Tape on the full length,
and 50mm inside at each end.

6 Tie the bridle

With fishing line 30/100 or more,
1,6 m length
Tie each end in each hole
By superposing the straps,
check the symmetry.
Make a small loop at the center of the bridle

7 Let fly

Use a small bobbin,
and 50m of twisted polyamid line,
(6660m/kg, resistance 6kg)

When flying, the sleeves are at canopy
Wind force 3 and 4

8 Adjust

If the parasled is always flying on same side,
slightly shorten the bridle on the opposite side.